

100%  
OZONE  
FREE

# RADIC 8 VK BLUE



WWW.RADIC8.COM.AU



VIRUSKILLER®

**100%  
OZONE  
FREE**

*As many other HEPA air purifiers, the VK Blue is a great solution for combatting particles such as dust, pollen and dander. Unlike ordinary HEPA air purifiers, the VK Blue is also super efficient at neutralising toxic gas, VOC's, viruses & bacteria, mould & fungi making it the best all-rounder in its class.*


*Please refer to our VK Sterilisation technology document for more information on 'how it works' as well as independent test results. You can see the scale of commercial and domestic installation in the World's leading air purification country in our reference sites list.*

Model No	VK Blue	
Using Area Max	Max (Full Fan) 66m <sup>2</sup>	
Elec. Power	AC 220-240W/50-60Hz	
Elec Consumption	Max 95 Watt	
Blower Fan	Sirocco Fan	
Reactor	UVC Bulb	8 EA
	Nano Tube Filter	About 40 EA
Filter	HEPA	20mm, 1 EA
	Pre filter	Washable 1 EA
Dimension	640 x 380 x165mm	
Net Weight	7.5 Kg	

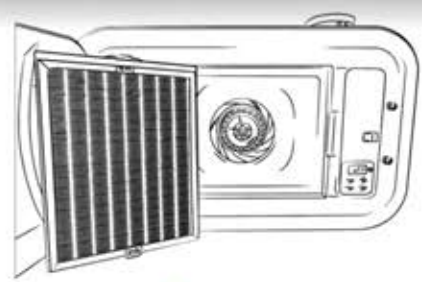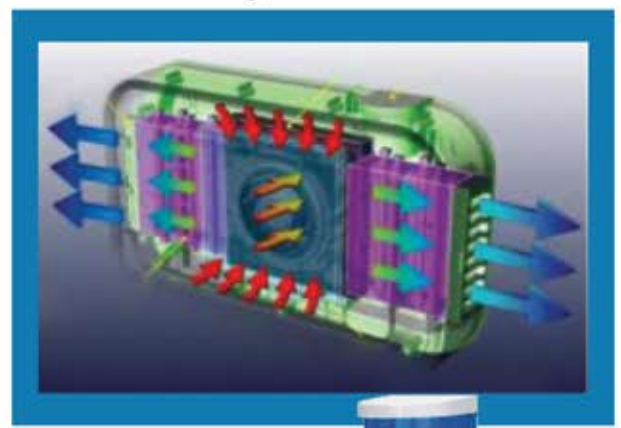

**Stage 1**  
Pre filter + Hepa filter  
to filter out particulates

**Stage 2**  
8 UV lights plus 40  
Titanium dioxide nano  
coated filter tubes  
filled with activated  
carbon to sterilise all  
other air pollutants.

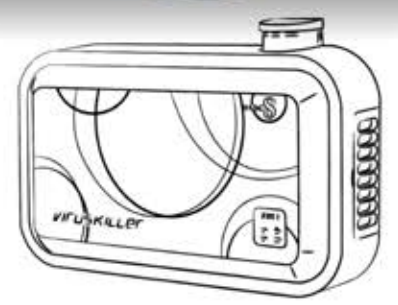

**Stage 3**  
Activated Carbon Filters  
for final air polishing.



100%  
OZONE  
FREE

For more information please e-mail: [support@radic8.com.au](mailto:support@radic8.com.au)

or call: +61 2 82316500

WWW.RADIC8.COM.AU