

5
minutes



UVBOX

Portable ultraviolet
disinfection box




Before
disinfection



After
disinfection

Proven to inactivate Covid-19.


Features

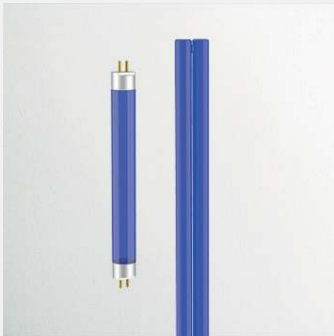

High quality lamp



Quartz glass tube
Allows full transmission of ultraviolet light

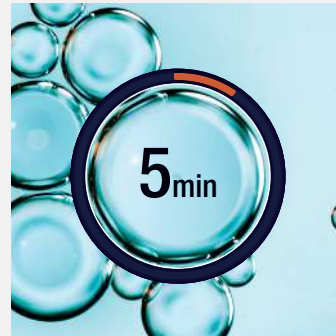

5 minutes
to get your belongings sanitized



Omnidirectional disinfection
No need to turn around



Fits most phones



6,000 hours long life tubes
Up to 720,000 times to use




No Ozone
Safe and harmless – Leave no residue
Note: Only when used in accordance with
manufacturer instructions



Buzzer Alarm
to remind when finishing disinfection

Application areas

Mobile phones, headsets, masks, office supplies, cosmetic tools, baby supplies, etc.

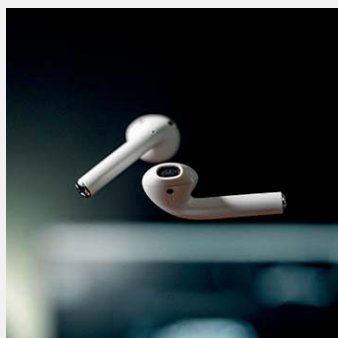

Product information

Product: GOLDENSEA UV Portable Ultraviolet Disinfection Box
Model: UVBOX
Light Source Wattage: 4W
Light Source Lifespan: Max. 6000h
Voltage: 100V-240V/50-60Hz

Current: Max. 30mA
Control: Touch keys
Material: Anti-UV ABS and quartz glass
Function: UV disinfection
Wavelength: 253.7 nm
Product dimension: 290 x 160 x 69 mm

Internal dimension: 210 x 100 x 48 mm
Compliance: CE, ETL, FCC
Application: Disinfect small items: mobile phones, headsets, masks, office supplies, cosmetic tools, baby supplies



Warning

Ultraviolet light can cause damage to eyes and skin.
All personnel, animals and plants must leave/ be moved from the site during use.

Precautions

1. The disinfection function will not start until the upper cover is closed, and should not open the cover during disinfection.

2. Valuables are not recommended to be put into the disinfection box, the surface of which will have the risk of fading.

3. Inflammable and explosive articles are not allowed to be put into the disinfection box.